

CANON DSLR SHOOTING MODE CHEAT SHEET

* X indicates settings user can change

Mode	Picture Type	Aperture	Shutter Speed	ISO	White Balance
M (manual)	All types	X	X	X	X
AV (Aperture Priority)	Portraits/ Still	X		X	X
TV (Shutter Speed Priority)	Sports/ Motion		X	X	X
P (Program)	Portraits			X	X
A-DEP	Landscape			X	X
A+ (Full Auto)	All				
Flash Off	All				
CA (Creative Auto)	Portraits/ Landscape				
Portrait Mode	Portraits				X
Landscape	Landscapes				X
Close-Up (Macro)	Still				X
Sports Mode	Sports/ Motion				X
Night Portrait	Low light portraits				