

# NIKON DSLR SHOOTING MODE CHEAT SHEET

\* X indicates settings user can change

Mode	Picture Type	Aperture	Shutter Speed	ISO	White Balance
M (manual)	All types	X	X	X	X
A (Aperture Priority)	Portraits/ Still	X		X	X
S (Shutter Speed Priority)	Sports/ Motion		X	X	X
P (Program)	Portraits			X	X
GUIDE	All types	SEE POST	FOR	DETAILS	
AUTO	All				
Flash Off	All				
Portrait Mode	Portraits			X	
Landscape	Landscapes			X	
Child	Children			X	
Sports Mode	Sports/ Motion			X	
Close-Up (Macro)	Still			X	
Night Portrait	Low light portraits			X	